

# Printers

## Fix Light/Washed Out Printing on a Canon MF740 Series Laser Printer (Canon Color ImageClass MF743Cdw)

We encountered a brand new Canon MF743Cdw producing light or “washed out” color and B&W prints.

This procedure below should correct this printing issue.

### 1. **Clean Fixing Assembly -**

Go to the Home Screen > Menu > Adjustment/Maintenance > Maintenance > Clean Fixing Assembly > Select 'OK' > Then, Select 'Start' in the lower righthand corner of the Printer Display.

### 2. **Correct Print Color Mismatch -**

Next, go to the Home Screen > Menu > Adjust Image Quality > Correct Print Color Mismatch > Select 'Start' in the lower righthand corner of the Printer's Display.

### 3. **Auto Adjust Gradation - Full Adjust -** (This is a more robust sequence than the initial Startup Color Adjustment when the printer was first turned ON.)

Go to the Home Screen > Menu > Adjust Image Quality > Auto Adjust Gradation > Full Adjust > Select 'OK' which will perform the following steps:

1. Print Image 1 for adjustment.
2. Scan the printed Image 1 for adjustment.
3. Print Image 2 for adjustment.
4. Scan the printed Image 2 for adjust.

Select 'Start' in the lower righthand corner of the Printer's Display, and follow the on screen instructions.

Source: [Canon Community](#)

Unique solution ID: #1073

Author: n/a

Last update: 2021-02-16 19:44